






Accessing Maintenance Functions with different A-Series Laser Controllers.

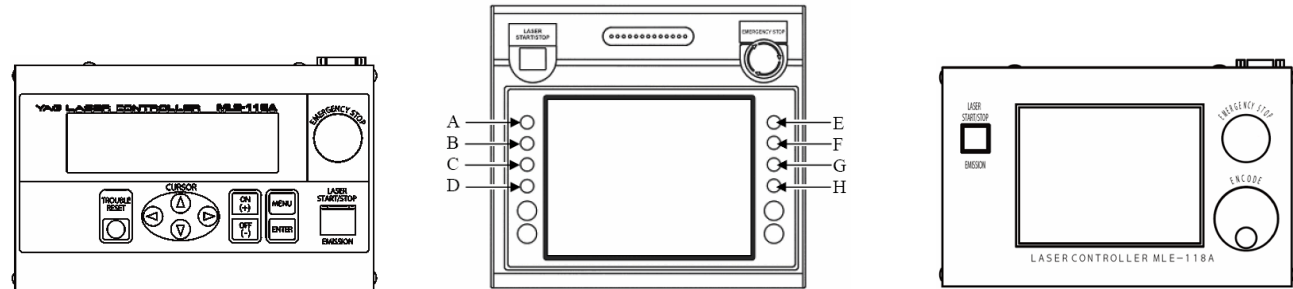

Function	MLE-115A	MLE-116A	MLE-118A
Enter Initialization Screen	<ol style="list-style-type: none"> 1. Power & Key Switch = OFF 2. Press and hold MENU while turning the power switch ON. 3. Release MENU after self-check. 4. <i>Init Screen</i> will display. (may take up to 10 seconds) 	<ol style="list-style-type: none"> 1. Power & Key Switch = OFF 2. Turn the power switch ON. 3. When the picture of the Laser appears, press D + F. 4. <i>Init Screen</i> will display. 	<ol style="list-style-type: none"> 1. Power & Key Switch = OFF 2. Press the <i>Encode</i> button while powering ON. 3. When the picture of the Laser appears, turn <i>Encode</i> CCW while continuously holding down the <i>Encode</i> button. 4. <i>Init Screen</i> will display.
Exit Initialization Screen	Recycle Power	Recycle Power	Recycle Power
Maintenance Mode Screen	TROUBLE RESET + ◀	Press A + H until screen appears. (may take up to 2 seconds)	<ol style="list-style-type: none"> 1. Rotate <i>Encode</i> to the Passwd field. 2. Press <i>Encode</i> button for ~ 2 sec (until you hear a faint beep). 3. Rotate <i>Encode</i> to the Print field. 4. Press <i>Encode</i> button for ~ 2 sec (until you hear a faint beep).
Password Mode Screen	TROUBLE RESET + ▲		
Print-Out Mode Screen	TROUBLE RESET + ▼		
Exit any Mode Screen	Press MENU	Press any Menu item on the touchscreen.	Using the <i>Encode</i> button, select any Menu item.